



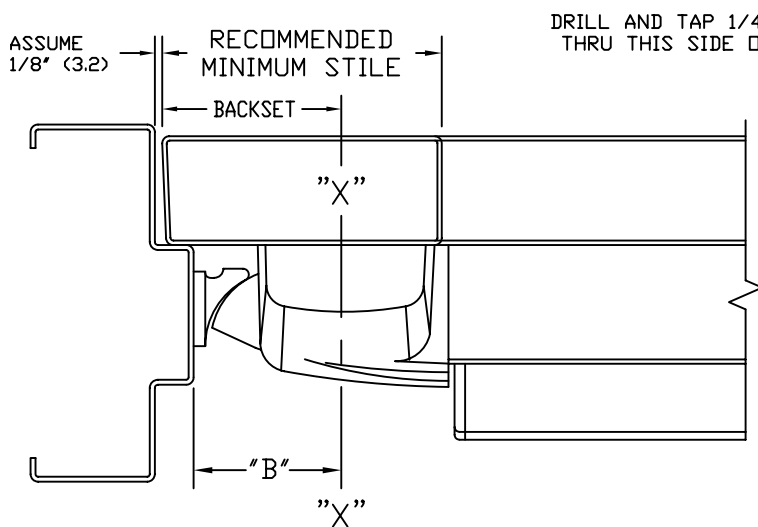

SINGLE DOOR INSTALLATION				
STRIKE	DIM. "B"	BACKSET	RECOMMENDED MINIMUM STILE	
99	2-7/16" (61.9)	2-15/16" (74.6)	4-5/8" (117.5)	SHOWN
98	1-15/16" (49.2)	2-7/16" (61.9)	4-1/8" (104.8)	NOT SHOWN *


NOTES:

1. DIMENSIONS SHOWN IN INCHES AND (mm).
2. ASSUME 5/8" STOP.
- *3. FOR ALUMINUM DOORS WITH NO BLADE STOP, USE TEMPLATE T1105

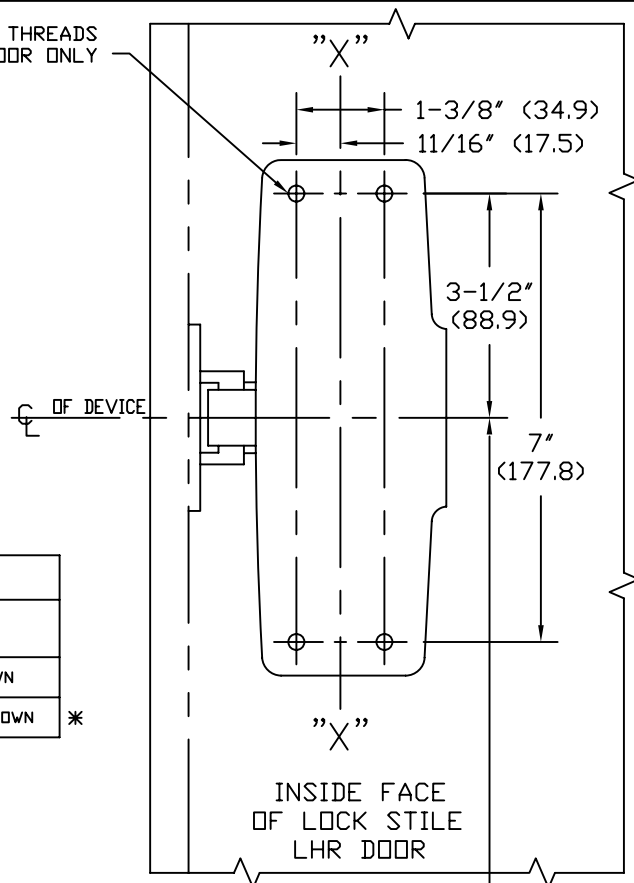

(LHR SHOWN RHR OPPOSITE)

40" (1016) HEIGHT (RECOMMENDED)
37" (940) MIN. HEIGHT TO FINISHED FLOOR

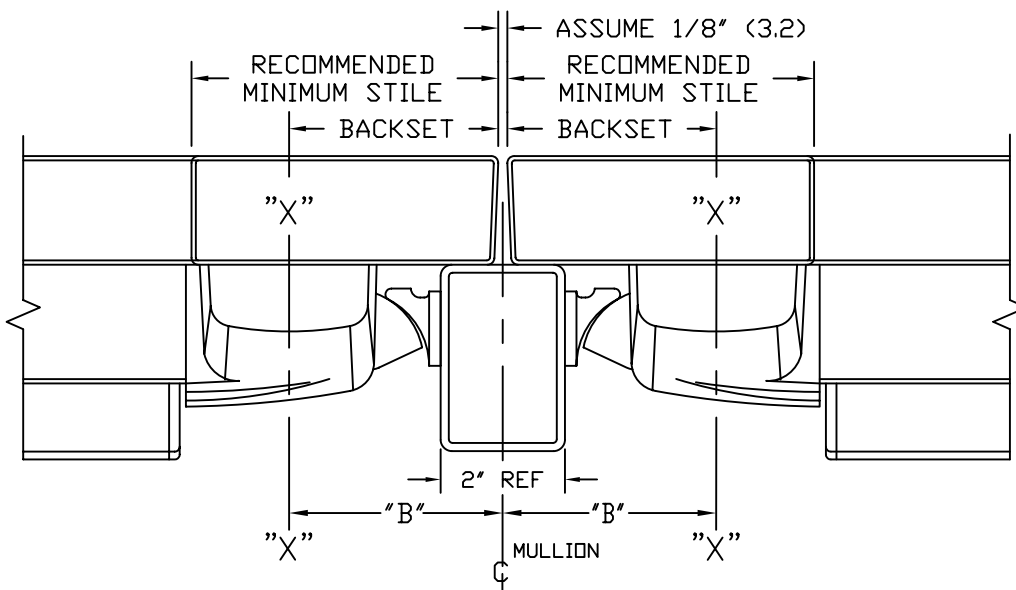

DOUBLE DOOR INSTALLATION WITH MULLION					
MULLION	STRIKE	DIM. "B"	BACKSET	RECOMMENDED MINIMUM STILE	
90KR & F90KR**	99	3-7/16" (87.3)	3-3/8" (85.7)	5-1/16" (128.6)	SHOWN
90KR & F90KR**	98	2-15/16" (74.6)	2-7/8" (73.0)	4-9/16" (115.9)	NOT SHOWN

**STRIKE HOOK HOLE LOCATION SHOULD BE FIELD PREPARED

HDG. DR.

RESPONSIBILITY
Door and Frame Manufacturers are responsible for providing adequate construction or reinforcements for proper installation of hardware shown. All architectural builders hardware must be installed on properly reinforced doors and frames regardless of the type, material or method of construction.

TEMPLATE
METAL/ALUMINUM DOOR
1001 & F1001 SERIES
RIM EXIT DEVICE
BP-1 or BP-7 MOUNTING PLATE

DETEx
CORPORATION

DO NOT SCALE DRAWING

DATE 6/21/05

TEMPLATE NUMBER T1001