



Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
830-629-2900 / 800-729-3839 / Fax 800-653-3839 / Text photos only: 830-481-6433 / INTERNET: www.detex.com

**INSTALLATION INSTRUCTIONS FOR DETEX VALUE SERIES® RIM V40 SERIES
FV40 SERIES, "H" MODEL (HURRICANE), "W" MODEL (WEATHERIZED), V40NS (NARROW STILE)**

Drawing: 101800
102400

U.S. PATENT NUMBERS:

6009732

6205825B1

6532777B2

INTERNATIONAL PATENT NUMBER:

PCT6009732

Table of Contents


Page

Device parts breakdown view.....	2
Device parts breakdown list with part numbers.....	3
Hardware List with part numbers & tools required.....	4
Door condition check.....	5
Mounting plate and 99 Strike installation.....	6
Device installation.....	7
Check for device clearance, Mortise cylinder installation.....	8
98 Strike installation, Strike hook installation.....	9
94 Double Door Strike installation (if required).....	10
Optional Accessories.....	11

For device installation videos,
scan code below or
go to detex.com



Owner's Copy

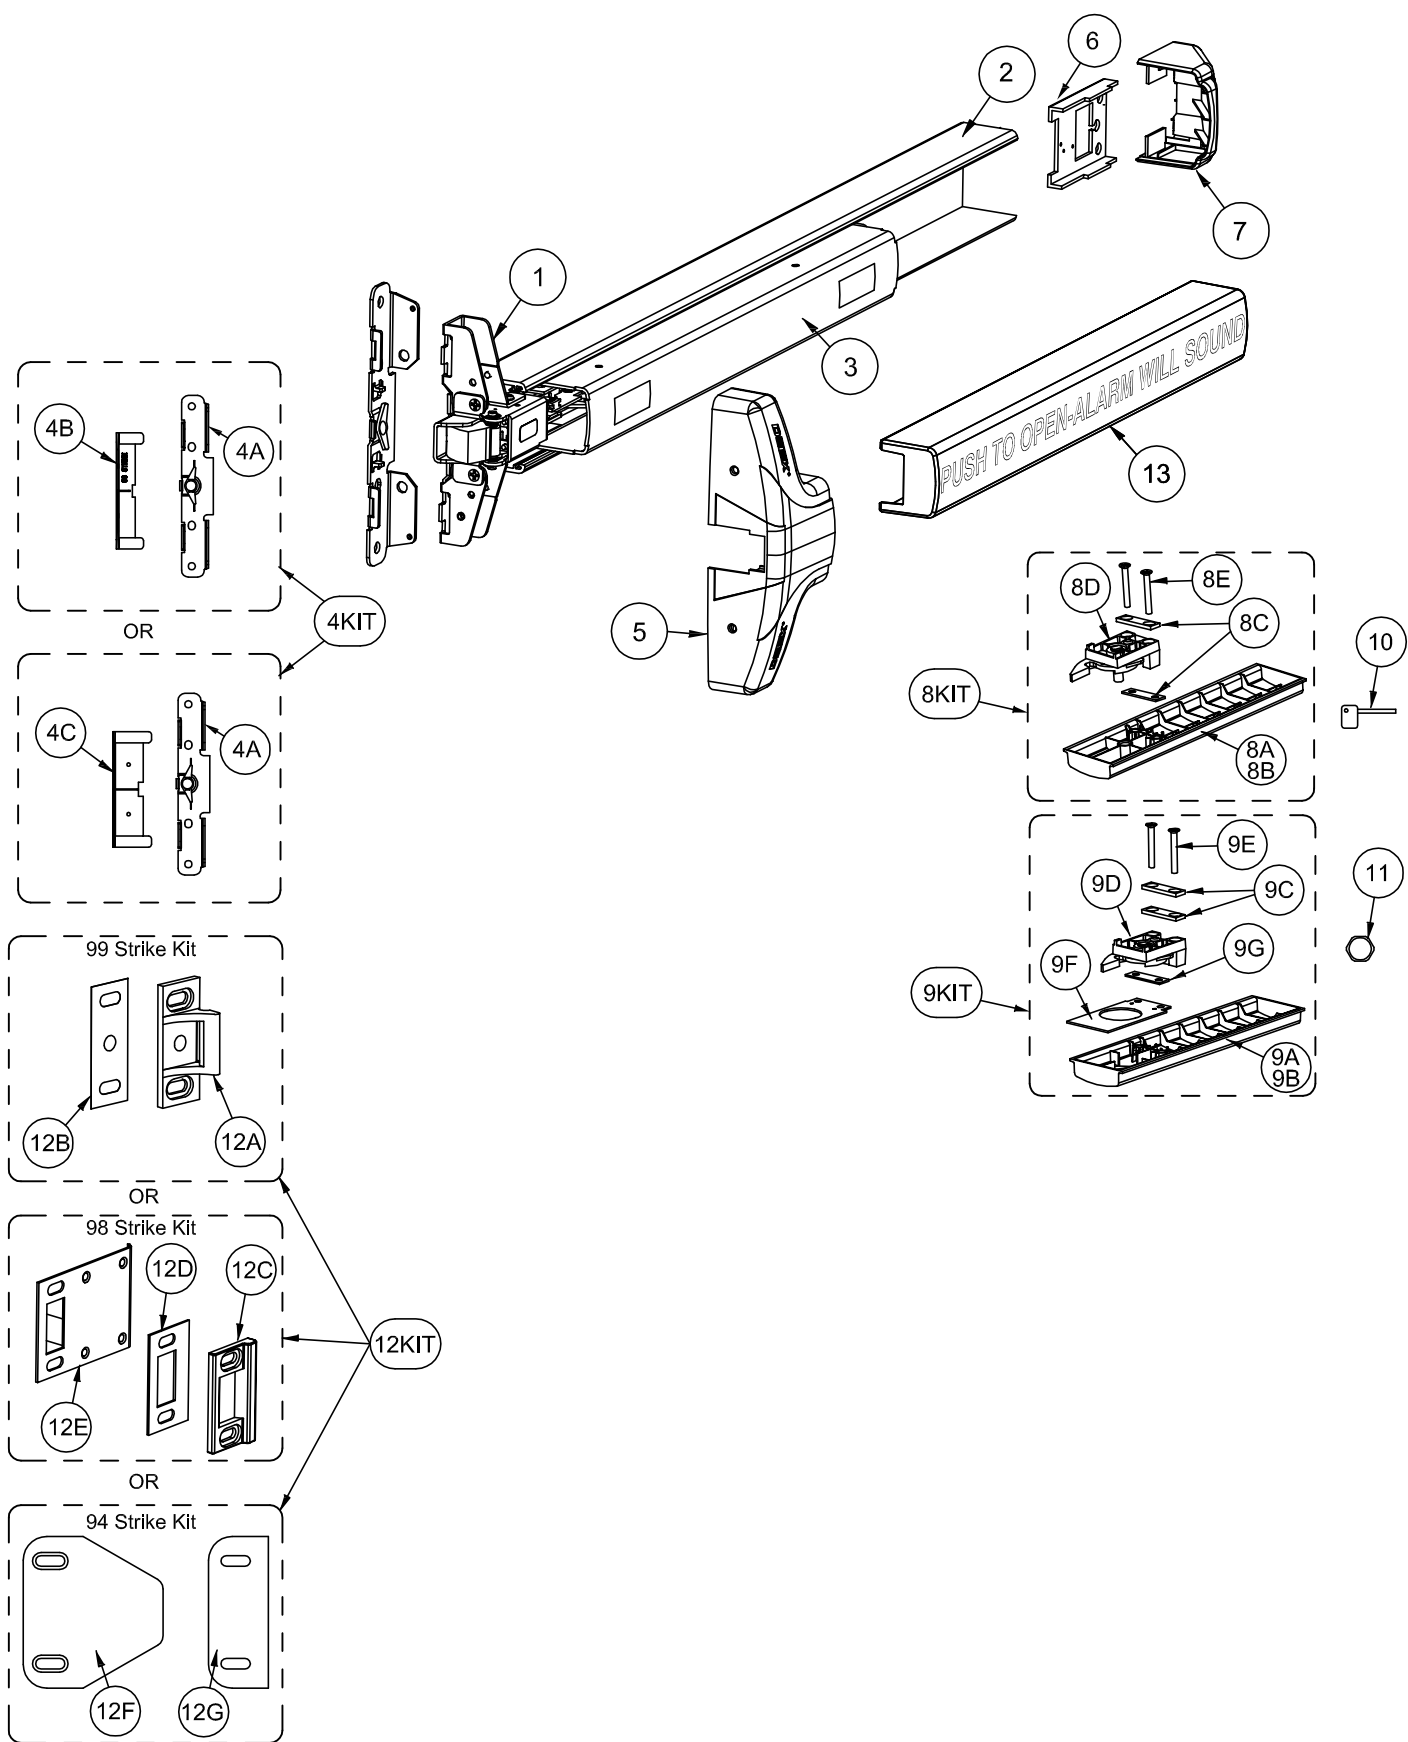



PARTS BREAKDOWN		
Item	Order Part #	Description
1	100698-5	Centercase Assembly, Narrow Stile, V40 series
2	106281	Baseplate Extrusion, 36", Silver
	106285	Baseplate Extrusion, 48", Silver
	106289	Baseplate Extrusion, 36", Black
	106290	Baseplate Extrusion, 48", Black
3	103065-1	Pushpad Subassembly, 36"
	103065-2	Pushpad Subassembly, 48"
4KIT	103806-1	Mounting Plate/Strike Locator Kit, Narrow Stile, 98 Strike BP2 (includes 4A & 4B)
	103806-2	Mounting Plate/Strike Locator Kit, Narrow Stile, 99 Strike, BP1 (includes 4A & 4C)
4A	100696-1	Mounting Plate, BP2, Narrow Stile
4B	101899	Strike Locator 2" Glass Door (98)
4C	100212	Strike Locator, Standard (99)
5	101805-1	Centercase Cover, V40 series
6	101844-1	Endcap bracket w/o battery holder
	101844	Endcap bracket w/ battery holder
7	101822	Endcap
8KIT	101803-1	Fillerplate, Subassembly, S&R, Hex Dogging, HD, V40 series, 36" (includes 8A or 8B through 8E)
8A	101812-1	Fillerplate, HD, 36"
8B	101812-2	Fillerplate, HD, 48"
8C	100164	Spacer, dogging bracket, .120" thick
8D	102216-4	Die cast dogging assembly, HD
8E	PP-5802-124	Screw, mach, 10-32 x 1-1/2" PFH
9KIT	102195-1	Fillerplate, Subassembly, S&R, Cylinder Dogging, CD, V40 series, 36" (includes 9A or 9B through 9G)
9A	102194-1	Fillerplate, CD, 36"
9B	102194-2	Fillerplate, CD, 48"
9C	100164	Spacer, dogging bracket
9D	102216-3	Die cast dogging assembly, CD
9E	PP-5802-124	Screw, mach, 10-32 x 1-1/2" PFH
9F	102196	Bracket, fillerplate, V40, CD
9G	100938	Spacer, dogging bracket, .060" thick
10	100450	Hex Key (for Hex Dogging)
11	100783	Cylinder Nut (for Cylinder Dogging)
12KIT	100855-2	99 Strike Kit (includes 12A & 12B)
	100855-1	98 Strike Kit (includes 12C, 12D & 12E)
	102212-1	94 Double Door Strike Kit (includes 12F & 12G)
12A	100234-1	Strike, Non-roller
12B	100088	Strike Shim
12C	100480	Strike, Mortise
12D	100482	Shim, Mortise Strike
12E	100481	Shield, Strike
12F	102211	Double Door Strike Plate
12G	102214	Shim, 94 strike
13	105417-1	Pushpad Wrap, 36", Red (English text)
	105417-2	Pushpad Wrap, 48", Red (English text)
	105417-3	Pushpad Wrap, 36", Black
	105417-4	Pushpad Wrap, 48", Black

Your particular part or configuration
may not be shown:
Contact Detex technical support
at 800-729-3839 (option 2)




Hardware Table for BASIC device mounting.
Additional hardware is provided per the device configuration in kit form and is addressed on the appropriate pages as required

Device hardware kit: p/n 101809-2 for Hex Dogging (HD)

Device hardware kit: p/n 101809-5 for Cylinder Dogging (CD)

	Fastener Part No	Drill Bit 
	P/N: 100980 1/4-20 x 1" PPH	#7 or 13/64"
	P/N: 101621-5 1/4-20 x 1/4" PPHMS	#7 or 13/64"
	P/N: 100162-106 6-32 x 3/8" PFHUMS	-----
	P/N: 103276-65 #14 x 1-1/2" PPH self-drilling	1/8 pilot hole recommended for self-drilling screws
	P/N: PP-5183-110 #14 x 1-1/4" PPH wood screw	1/8 pilot hole recommended for wood screws
	P/N: PP-5067-25 #14 Lockwasher	

99 Strike Kit: p/n 100855-2 or 98 Strike Kit: p/n 100855-1

	P/N: 100980 1/4-20 x 1" PPH	#7 or 13/64"	in both kits
	P/N: 100112 10-24 x 5/8" PFHUMS		in 99 kit only
	P/N: 100162-1 6-32 x 5/8" PFHUMS		in 98 kit only
	P/N: 103276-63 #14 x 1" PPH	1/8 pilot hole recommended for self-drilling screws	in both kits
	P/N: 103277-216 #10 x 1" self-cutting PFHU		in 99 kit only
	P/N: 101451-1 #6 x 1" self-cutting PFHU		in 98 kit only


Tools Required:

Safety Glasses
Power Drill
Tape Measure
Level

Pencil
Hammer
Pliers
1/4-20 Tap

Phillips & small flat Screw Drivers
Combination Square
Center Punch
Saw for cutting device if necessary (chopsaw preferred)

!!!CHECK BEFORE STARTING!!!

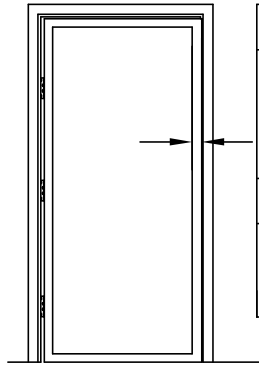

Wide Stile (Surface Strike)

Minimum door stile 4-1/2" (114 mm)
Template drawings provide door and frame structural and dimensional specifications for door and frame preparation.

Narrow Stile

Minimum door stile 2" (51mm)
Surface strike possible
Mortise strike recommended



Doors and frames with walls having a structural thickness (metal skin plus reinforcement, or solid wood) to engage less than (3) full screw threads, are considered unreinforced for hardware.

Unreinforced Doors: Use Sex Nuts and Bolts


Unreinforced Frames: Use Blind Rivet Nuts (see sketch)

Fasteners for unreinforced openings are not supplied by Detex.


Reinforced door or frame engages at least (3) screw threads.

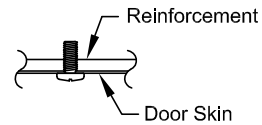


Blind Rivet Nut

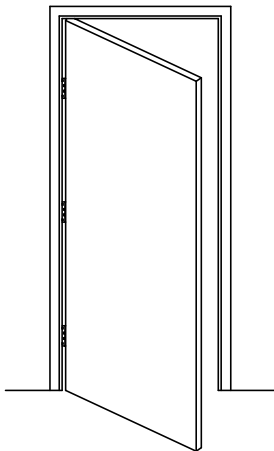


Door Must Swing Freely

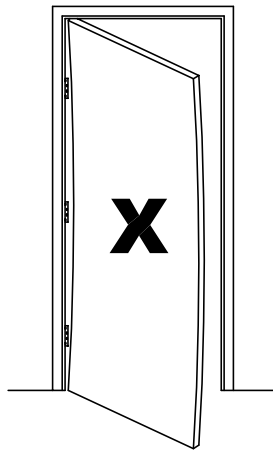

Door Must Not be Warped

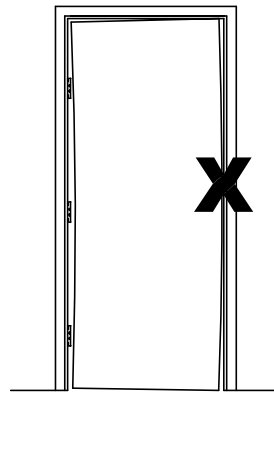

Door Must Not Bind

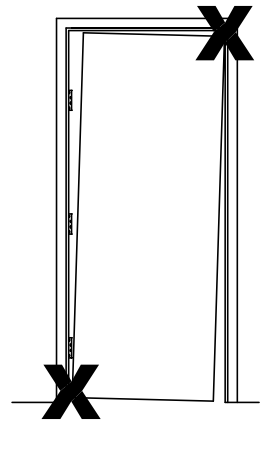


Door Must Not Sag

NOTE: 750mm MAXIMUM DOOR WIDTH OPENING FOR EUROPE FOR 36" DEVICE


(1000mm MAXIMUM DOOR WIDTH OPENING FOR EUROPE FOR 48" DEVICE)

THE SAFETY FEATURES OF THIS PRODUCT ARE ESSENTIAL TO ITS COMPLIANCE WITH EN 1125.

NO MODIFICATION OF ANY KIND, OTHER THAN THOSE DESCRIBED IN THESE INSTRUCTIONS ARE PERMITTED.

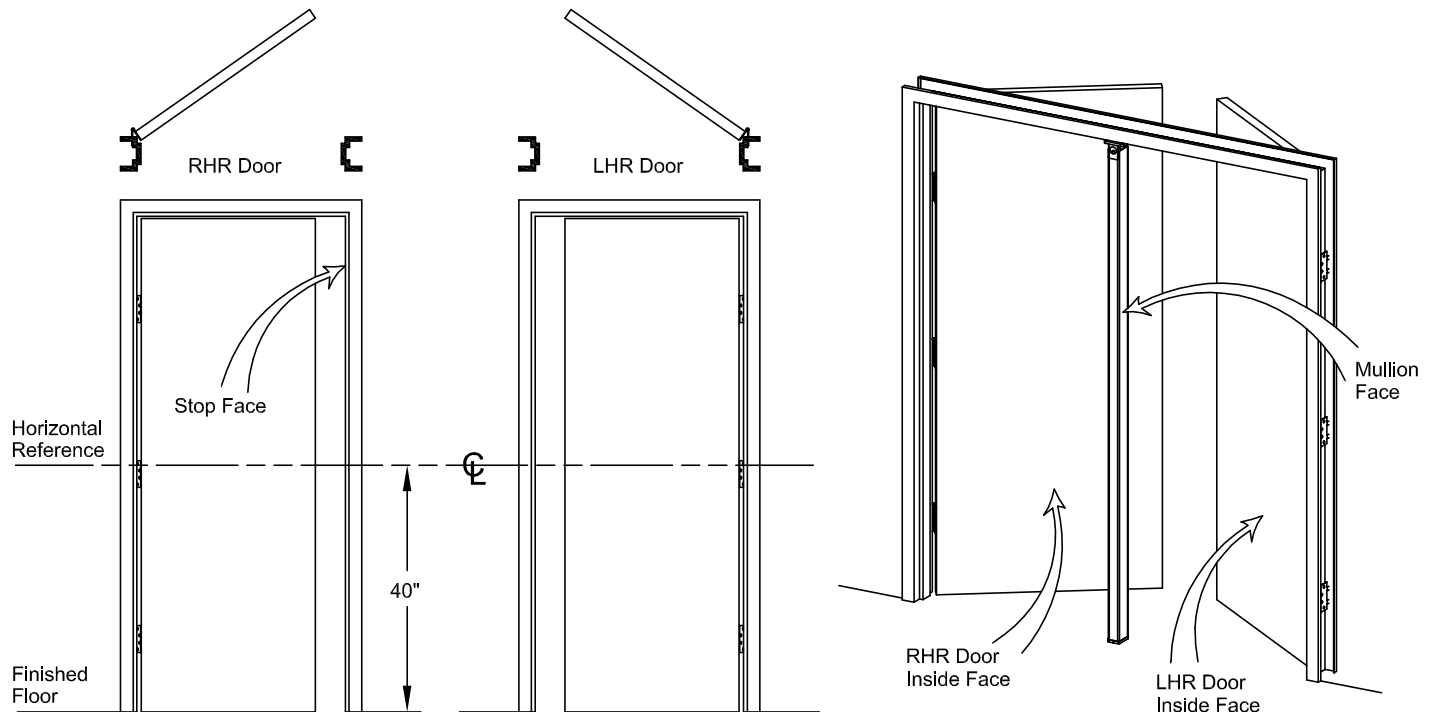


MOUNTING PLATE & STRIKE INSTALLATION:

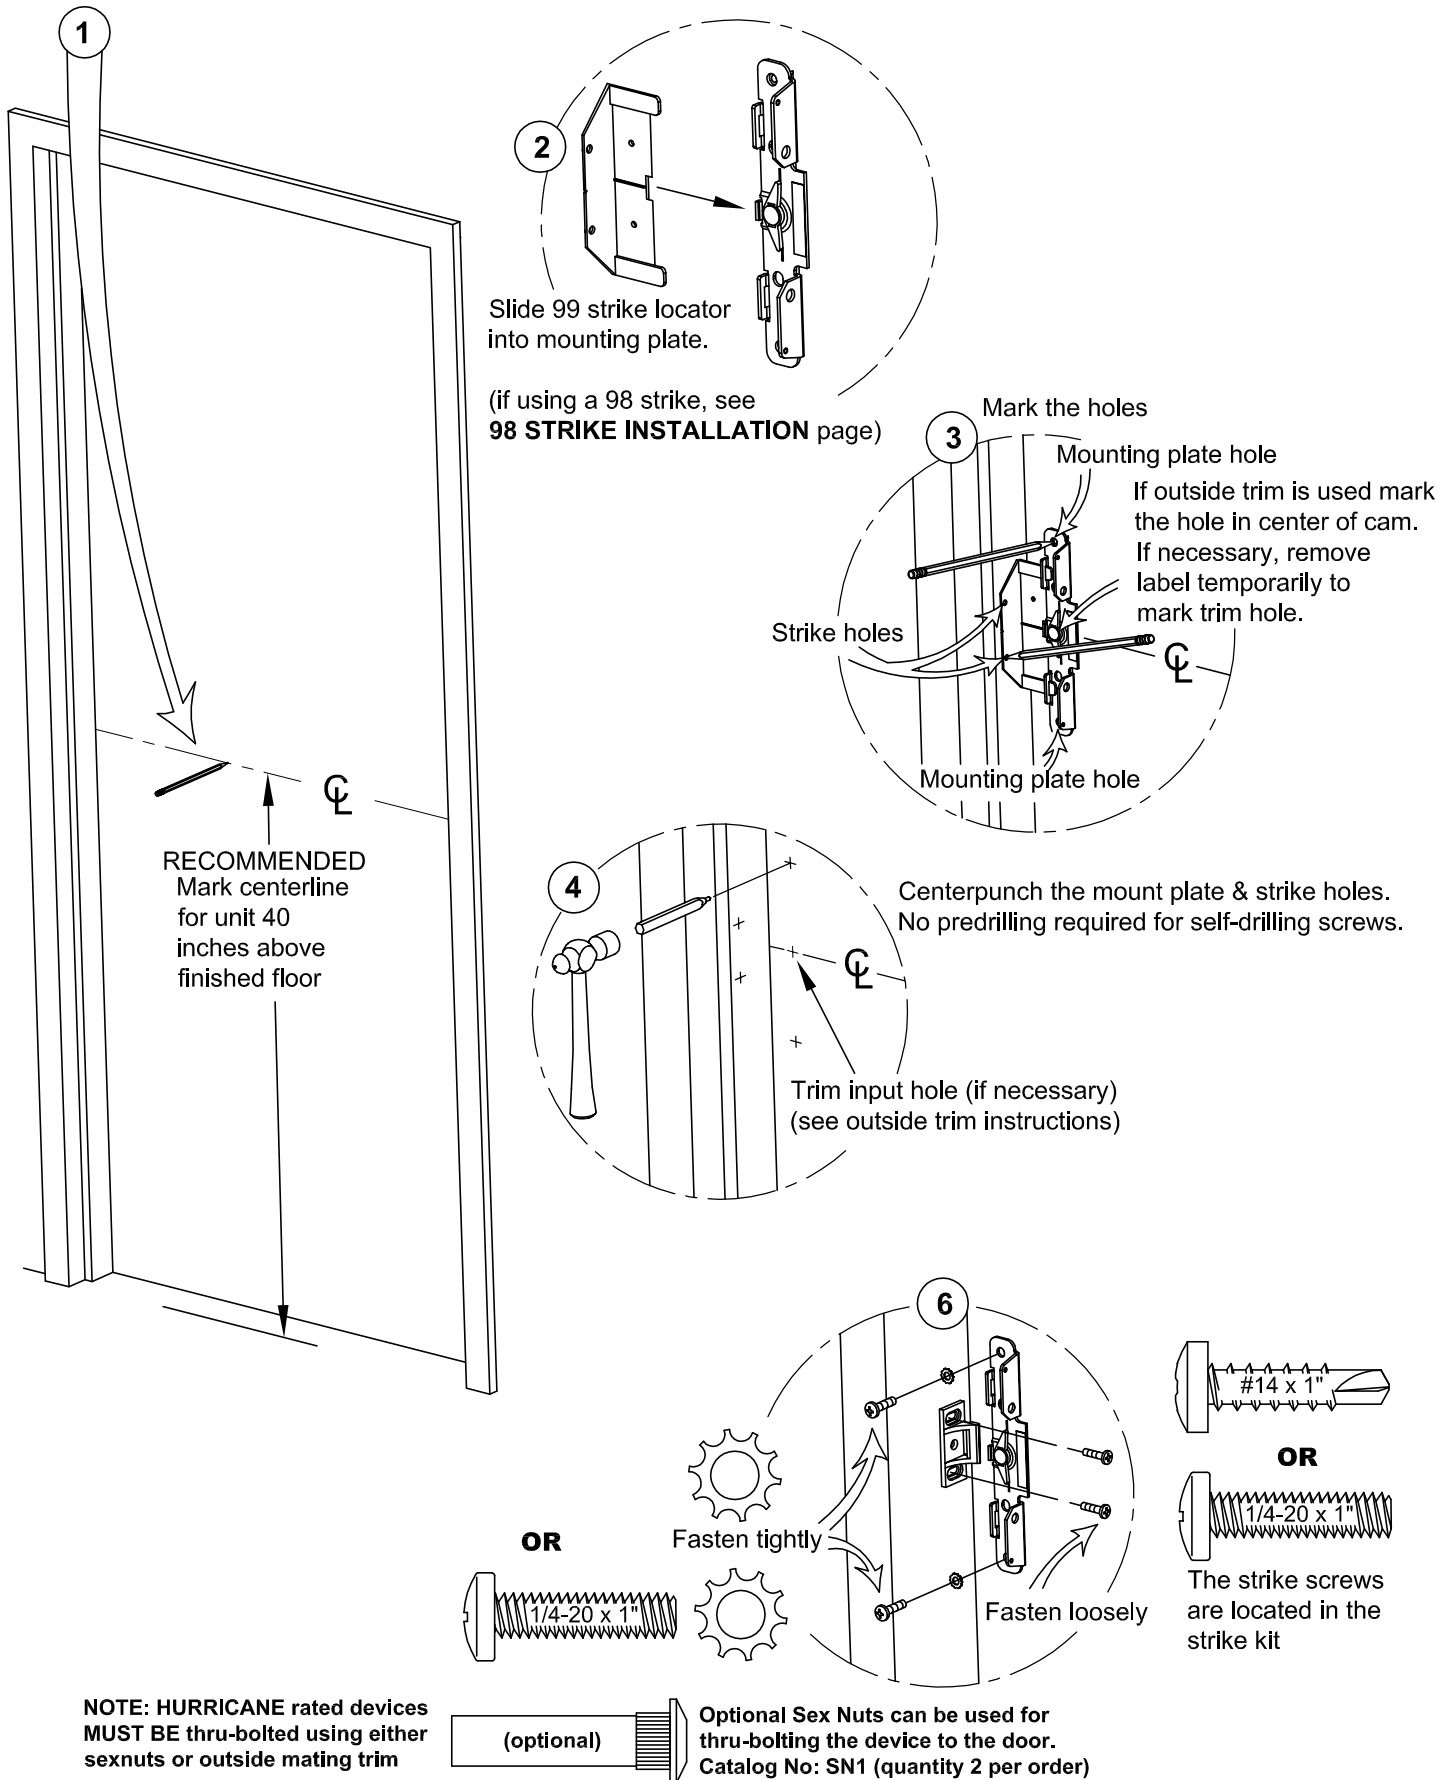



DEVICE INSTALLATION:

NOTE: If device is too long, refer to next page for cut-down procedure.

Position cam as shown

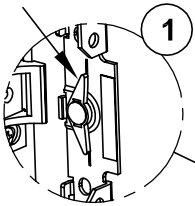


Insert centercase into slots of centercase mounting plate, **DEPRESS PUSHPAD**, rotate toward door.

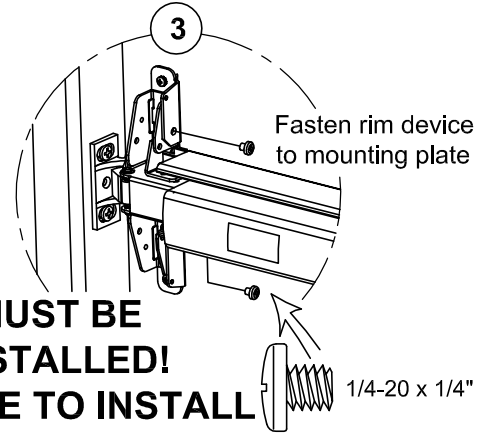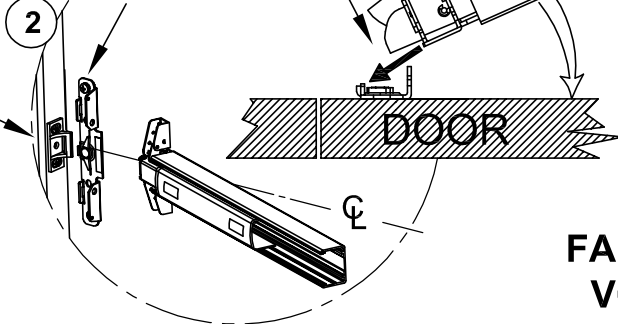

**MUST BE INSTALLED!
FAILURE TO INSTALL
VOIDS WARRANTY**


Level device

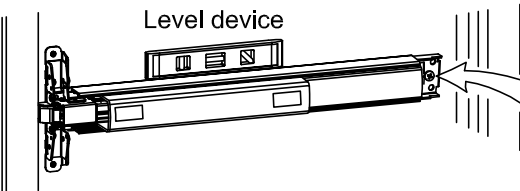

Slide fillerplate & endcap bracket into extrusion & level pushpad assembly.
Note: Endcap Bracket must bottom-out on extrusion.
DO NOT REMOVE NYLON SPACER ON BACK OF BRACKET!

With pushpad assembly level, secure the endcap bracket to door by tightening the factory installed self-drilling screw.

Slide and mount endcap to endcap bracket. **DO NOT OVERTIGHTEN SCREWS**

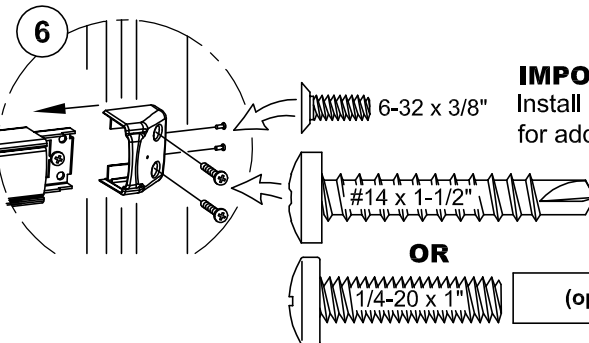


IMPORTANT:
Install 6-32 screws for added security


OR

(optional)


If Pushpad Wrap is not already installed, follow step 7.

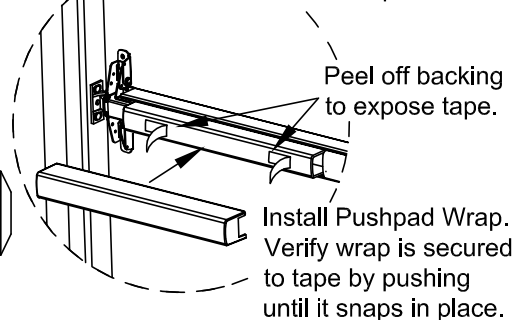

Align the 99 strike with the latchbolt. Firmly tighten screws (shim if needed)

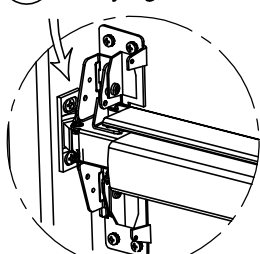


99 strike

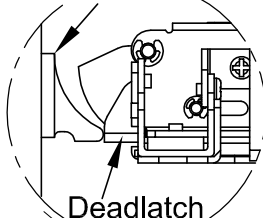

Deadlatch

Secure the 99 strike
(Required on hurricane models)

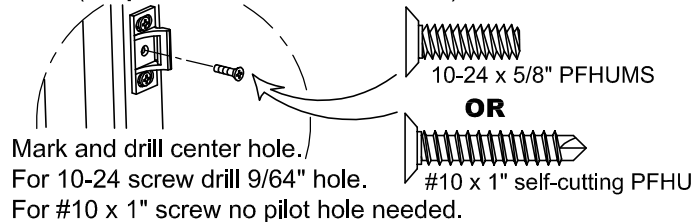


Mark and drill center hole.
For 10-24 screw drill 9/64" hole.
For #10 x 1" screw no pilot hole needed.


Note:

Check device function and strike engagement BEFORE going to step 9

10 REQUIRED SUPPORT SCREWS FOR HURRICANE MODELS
(Optional on non-hurricane models)

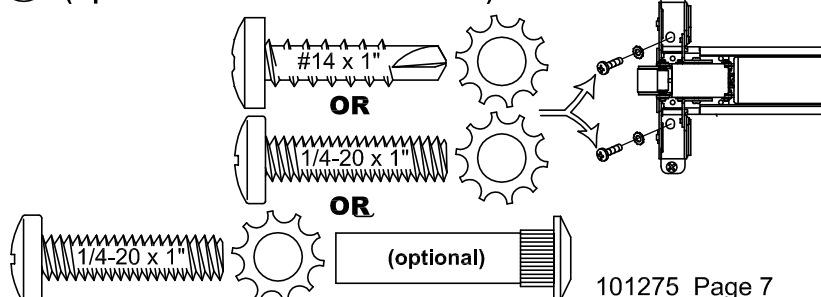


11
Install cover

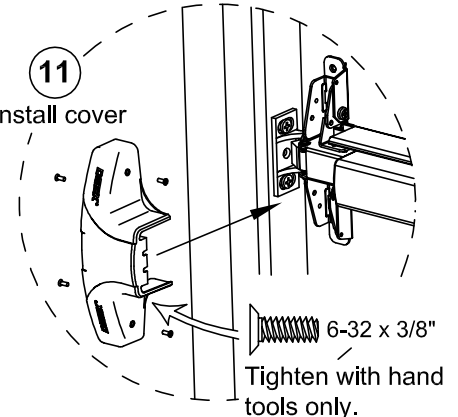


CHECKING FOR DEVICE CLEARANCE (Cut-Off procedure if required)

- 1 Slide endcap assembly onto extrusion

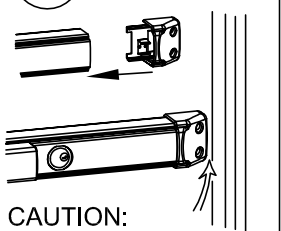

CAUTION:
Check for device & door frame clearance. If no cut-off needed, proceed to MORTISE CYLINDER INSTALLATION

- 2 Cut fillerplate and extrusion STRAIGHT & SQUARE to desired length and deburr

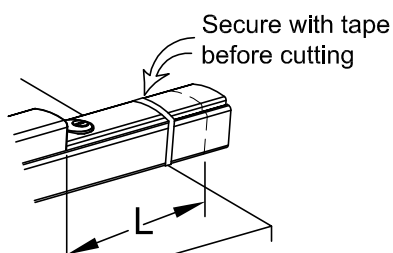


Non-Electrified Minimum Fillerplate Length

Type	Length (L)
LD	2-1/2"
HD/CD	3"



For further Cut-Down
information, see:
www.detex.com/cutdown

MORTISE CYLINDER INSTALLATION (if required)

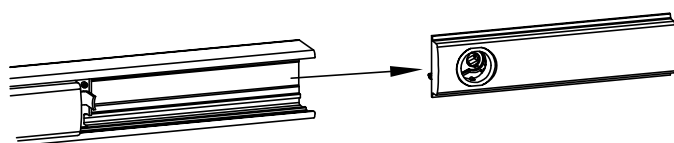


Slide / remove the fillerplate subassembly

1/4" collar (not supplied)
required for 7 pin cylinder.
(Detex p/n: ECL-1595)

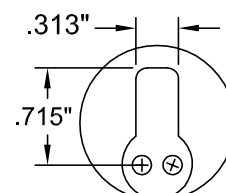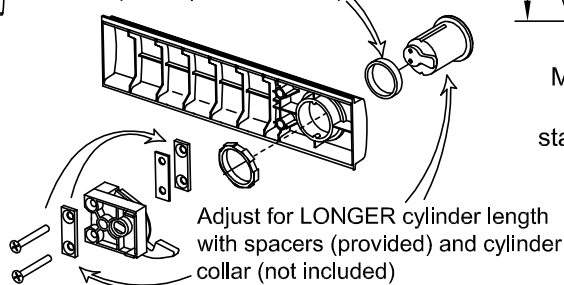

Mortise Cylinder
with
standard Yale cam
required


- (1) All cylinder spacers must be used.
- (2) Turn key max CCW before installing slide in fillerplate.
- (3) Reinstall fillerplate subassembly

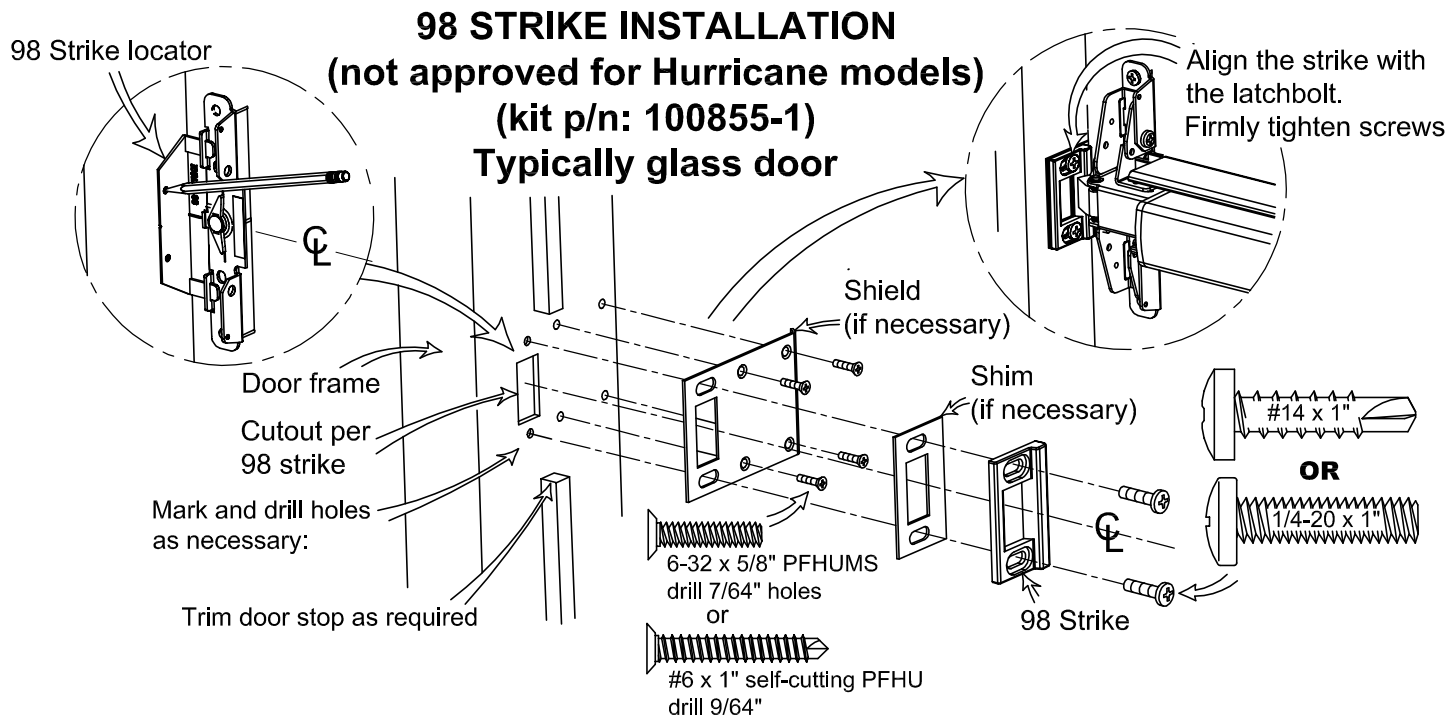

STRIKE HOOK INSTALLATION


Strike Hook Kit p/n 101795

(Caution: This installation is required on fire rated door openings with removable mullion.)

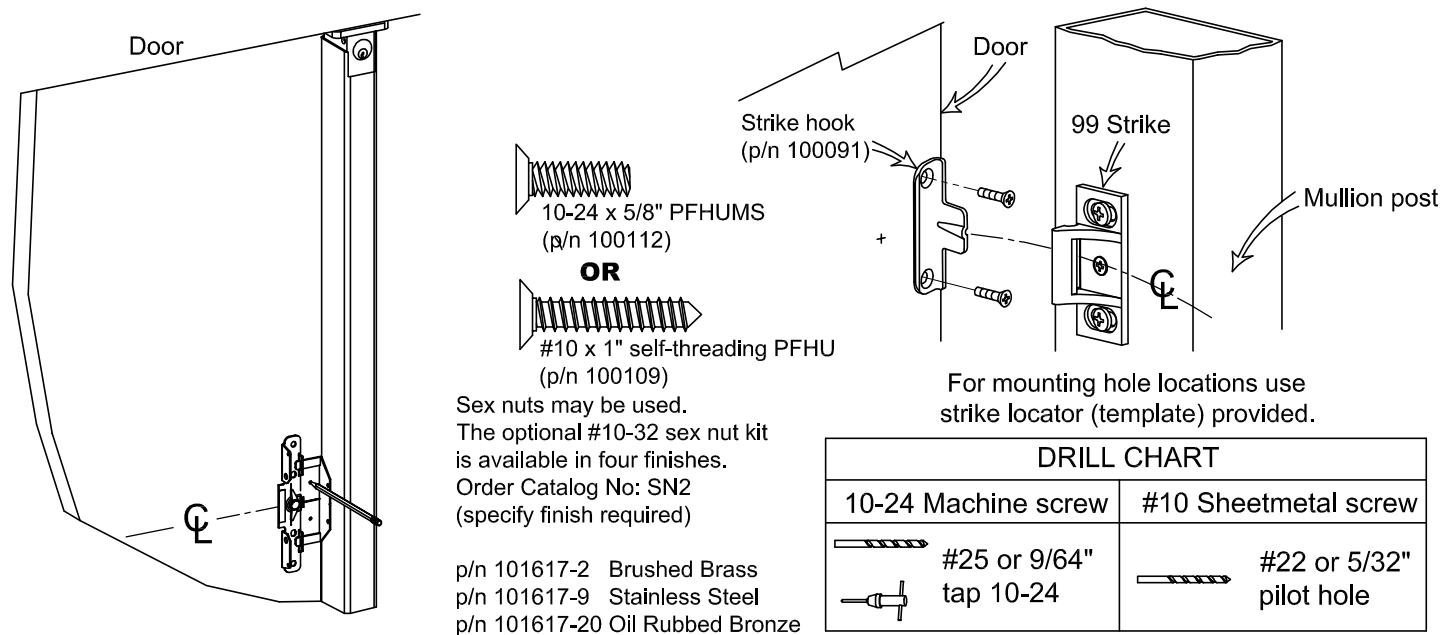


Narrow Stile Endcap Mounting Plate Fascia (p/n 101864) (For use on Glass Doors)


- Remove the endcap mounting bracket.
- Remove nylon spacer.
- Slide fascia onto screw.
- Reinstall nylon spacer.
- Reinstall endcap mounting bracket.

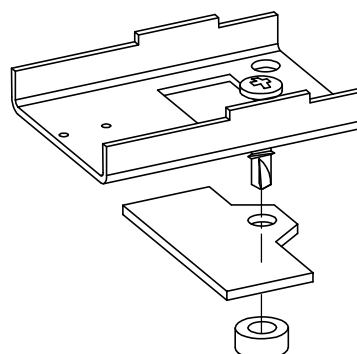

94 DOUBLE DOOR STRIKE INSTALLATION
(not approved for Hurricane models)
(if required)

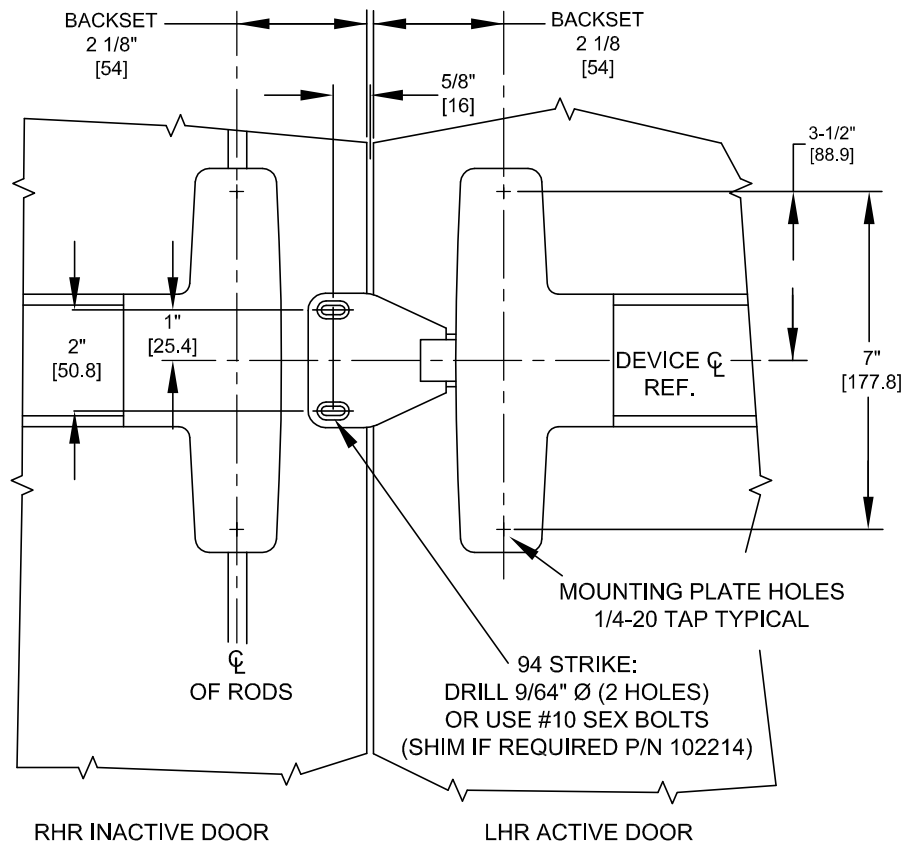

NOTE: FOR DEVICE FUNCTION AND OTHER DIMENSIONS, SEE
 APPROPRIATE DEVICE AND/OR TRIM INSTRUCTIONS

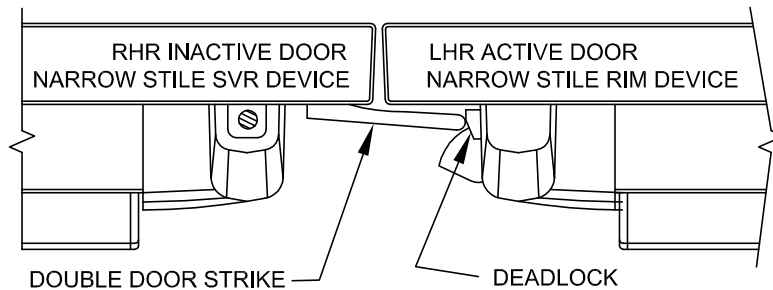


THE DEVICE USED ON THE ACTIVE DOOR SHOULD BE INSTALLED SO THAT THE STRIKE WILL DEPRESS THE DEADLOCK SUFFICIENTLY TO ALLOW FOR ANY AND ALL ALARM / ELECTRONIC FUNCTIONS.
 ADD SHIM (P/N 102214) AS REQUIRED. TWO PROVIDED IN KIT.
 THE INACTIVE DOOR SHOULD CLOSE FIRST.


Optional Accessories

Glass Bead Kit

Catalog No: GB2 - Glass Bead Kit, 40 series
p/n: 101644

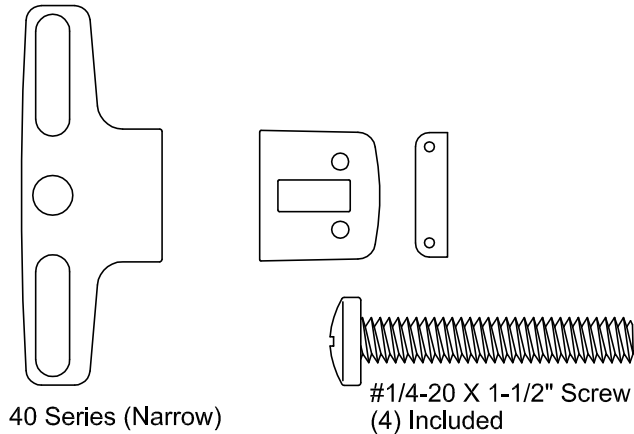

Sex Nut




The #1/4-20 kit is available in (4) finishes:

Catalog No: SN1 Brushed Brass BHMA 606 Finish
Catalog No: SN1 Oil Rubbed Bronze BHMA 613 Finish
Catalog No: SN1 Brushed Chrome BHMA 626 Finish
Catalog No: SN1 Stainless Steel BHMA 630 Finish

p/n: 101616-X


Tamper Kit

(Security Kit)
Catalog No: SSK3
p/n: 101233

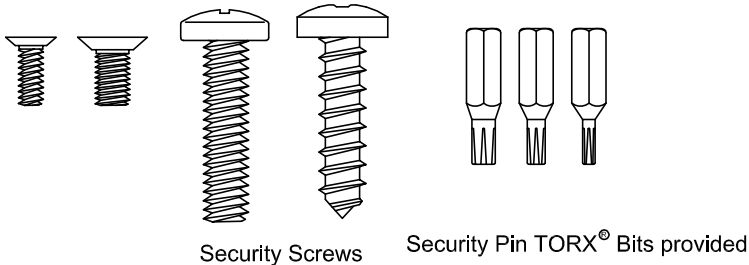


Narrow Stile Door Kit

(Splice Kit may be used with either 3-0 or 4-0 units)
Catalog No: NSK1
p/n: 101879-1 (628 Finish, Clear)
p/n: 101189-2 (711 Finish, Black)
(includes 98 Strike)




Double Door Strike Kit

Catalog No: 94 (with Security screws)
p/n: 102212-1

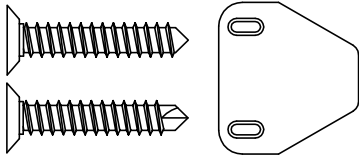


Key Stop Kit

Catalog No: KS
p/n: 101867
Requires a .05 hex wrench (not included)

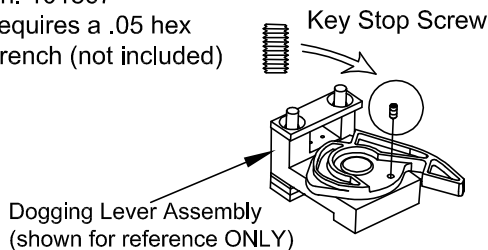

Cylinder nut socket kit

p/n: 103779

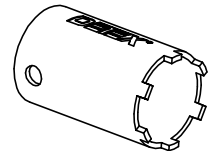

The following Models in the series were evaluated by UL: Controlled Exit Panic Devices; Model 10 and 40. These devices may be suffixed with 01, 02, 03, 08, 09, or 14 followed by C, CN, D, DN, DT, DNT, DU, DNU, P, PN, W or WS, followed by BP1, BP2, BP3, BP5, BP6, BP7 or BP8 followed by 605, 606, 611, 612, 613, 625, 626, 628, 629, 630, 693, 695 or 711 followed by the RHR or LHR, followed by EA, which may be followed by LD or CD, followed by 605, 606, 611, 612, 613, 625, 626, 628, 629, 630, 693, 695 or 711 followed by 98 or 99, followed by 36 or 48.